

SPARE PARTS

**QUICKE
3300 US
MK1**




Lastapparat
Loader
Frontlader
Chargeur

QUICK US 3300

2	17	011	A
---	----	-----	---

82 09 20

143041-042

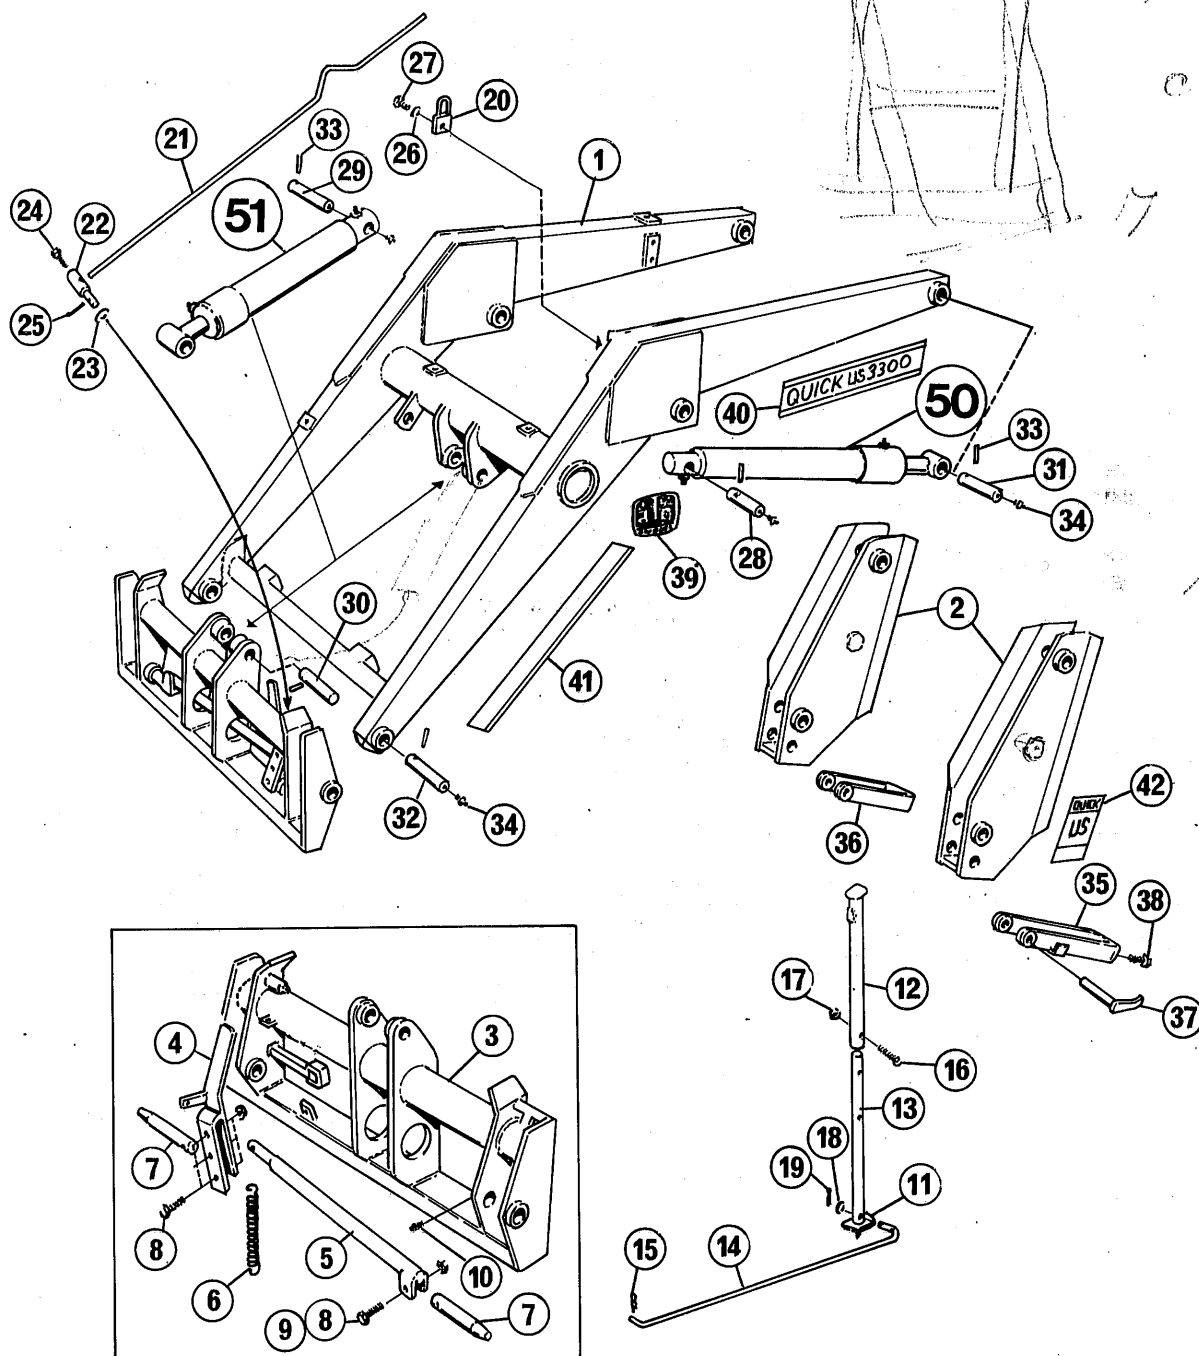



143 041 - 042

Pos. Teil Item Repère	Best.nr Part No. Bestell-Nr. Référence	Benämning / Description / Benennung / Désignation	Antal Quantity Anzahl Nombre
1 43 041 -- 1 43 042 (US-3300)			
1	1 42 601	Lastarm / Beam / Schwinge / Bras de levage	1
2	1 42 602	Lagerlåda / Bearing Box / Lager-Gehäuse / Bloc de palier	2
	1 42 603	REDSKAPSFÄSTE,kpl / TOOL CARRIER,compl / GERÄTETRÄGER,kpl / POIRE-OUTILS,complet	1
3	1 42 604	Fäste / Support / Halter / Support	(1)
4	1 42 605	Spak / Lever / Hebel / Levier	(1)
5	1 44 107	Stag / Rod / Stange / Tirant	(1)
6	11 01 001	Fjäder / Spring / Feder / Ressort	(1)
7	11 16 529	Låstapp / Latch Bolt / Sperrbolzen / Boulon de verrouillage	(2)
8	50 02 080	Skruv / Screw / Schraube / Vis	M6S 10 x 60 (4)
9	50 11 554	Mutter / Nut / Mutter / Ecrou	M6M 10 Loc-King (4)
10	50 23 005	Smörjnippel / Greaser / Schmiernippel / Graisseur	M 10 (2)
	1 44 108	STÖDBEN,kpl / PARKING SUPPORT,compl. / ABSTELLSTÜTZE,kpl / BEQUILLE DE REPOS,complet	2
11	1 44 109	Fot / Feet / Fuss / Pied	(1)
12	1 44 110	Ben,övre / Leg,upper / Beine,obere / Jambe,audessus	(1)
13	1 44 111	Ben,undre / Leg,under / Beine,untere / Jambe,audessous	(1)
14	1 44 112	Stag / Stay / Strebe / Appui	(1)
15	50 16 051	Låsfjäder / Spring Clip / Federsplint / Goupille d'épingle	dia.4 x 75 (1)
16	50 02 056	Skruv / Screw / Schraube / Vis	M6S 8 x 50 (1)
17	50 11 553	Mutter / Mutter / Nut / Mutter	M 8 Loc-King (1)
18	50 13 105	Bricka / Washer / Scheibe / Rondelle	BRB 17 x 30 (1)
19	50 16 154	Saxpinne / Split Pin / Splint / Goupille fendue	SP 5 x 40 (1)
20	1 42 607	Lägesanvisare / Level Indicator / Horizontalanzeiger / Indicateur d'horizontalité	1
21	1 42 608	Stång / Bar / Stange / Barre	1
22	1 42 609	Nippel / Nipple / Einsteckteil / Nipple	1
23	50 13 107	Bricka / Washer / Scheibe / Rondelle	BRB 15 x 26 (1)
24	50 02 051	Skruv / Screw / Schraube / Vis	M6S 8 x 20 (1)
25	50 16 110	Saxpinne / Split Pin / Splint / Goupille fendue	SP 4 x 25 (1)
26	50 13 101	Bricka / Washer / Scheibe / Rondelle	BRB 8,4 x 16 (1)
27	50 02 058	Skruv / Screw / Schraube / Vis	M6S 8 x 16 (1)
28	11 16 411	Iapp / Pivot Pin / Bolzen / Broche	dia.30 x 112 (2)
29	11 16 412	Iapp / Pivot Pin / Bolzen / Broche	dia.30 x 118 (1)
30	11 16 413	Iapp / Pivot Pin / Bolzen / Broche	dia.30 x 132 (1)
31	11 16 414	Iapp / Pivot Pin / Bolzen / Broche	dia.30 x 134 (4)
32	11 16 415	Iapp / Pivot Pin / Bolzen / Broche	dia.30 x 144 (2)
33	11 16 531	Låspinne / Securing Pin / Sicherungsstift / Goupille de verrouillage	dia 10 (10)
34	50 23 005	Smörjnippel / Greaser / Schmiernippel / Graisseur	M 10 (10)
35	1 44 116	Spänngaffel,VÅ / Retaining Fork,left / Spannbygel,links / Bride de serrage,gauche	1
36	1 44 117	Spänngaffel,HÖ / Retaining Fork,right / Spannbygel,rechts / Bride de serrage,droite	1
37	11 16 525	Låstapp / Handle Bolt / Steckbolzen / Broche à poignée	2
38	50 02 253	Skruv / Screw / Schraube / Vis	M6S 24 x 50 (2)
39	11 05 544	Dekal / Transfer / Abziehbild / Autocollant	"ALÖ" (2)
40	11 23 002	Dekal / Transfer / Abziehbild / Autocollant	"US-3300" (2)
41	11 23 041	Dekal / Transfer / Abziehbild / Autocollant	"Stripe 700" (2)
42	11 23 022	Dekal / Transfer / Abziehbild / Autocollant	"US" (1)
50	6 79 010 ¹⁾	LYFTCYLINDER / LIFT RAM / HUBZYLINDER / VERIN DE LEVAGE	dia. 63/40 (2)
51	6 82 010 ²⁾	REDSKAPSCYLINDER / BUCKETRAM / GERÄTEZYLINDER / VERIN DE CABRAGE	dia. 75/40 (2)

1) Ingående detaljer / Parts Included / Einzelteile / Éléments inclus

1) Blad / Leaf / Blatt / Feuille: 5 01 094

2) Blad / Leaf / Blatt / Feuille: 5 01 097

313 022

RESERVDELAR • SPARE PARTS • ERSATZTEILE • PIÉCES DE RECHANGE




Lastapparat
Loader
Frontlader
Chargeur

QUICK US 3300

2	17	012	A
---	----	-----	---

820920

143041-042

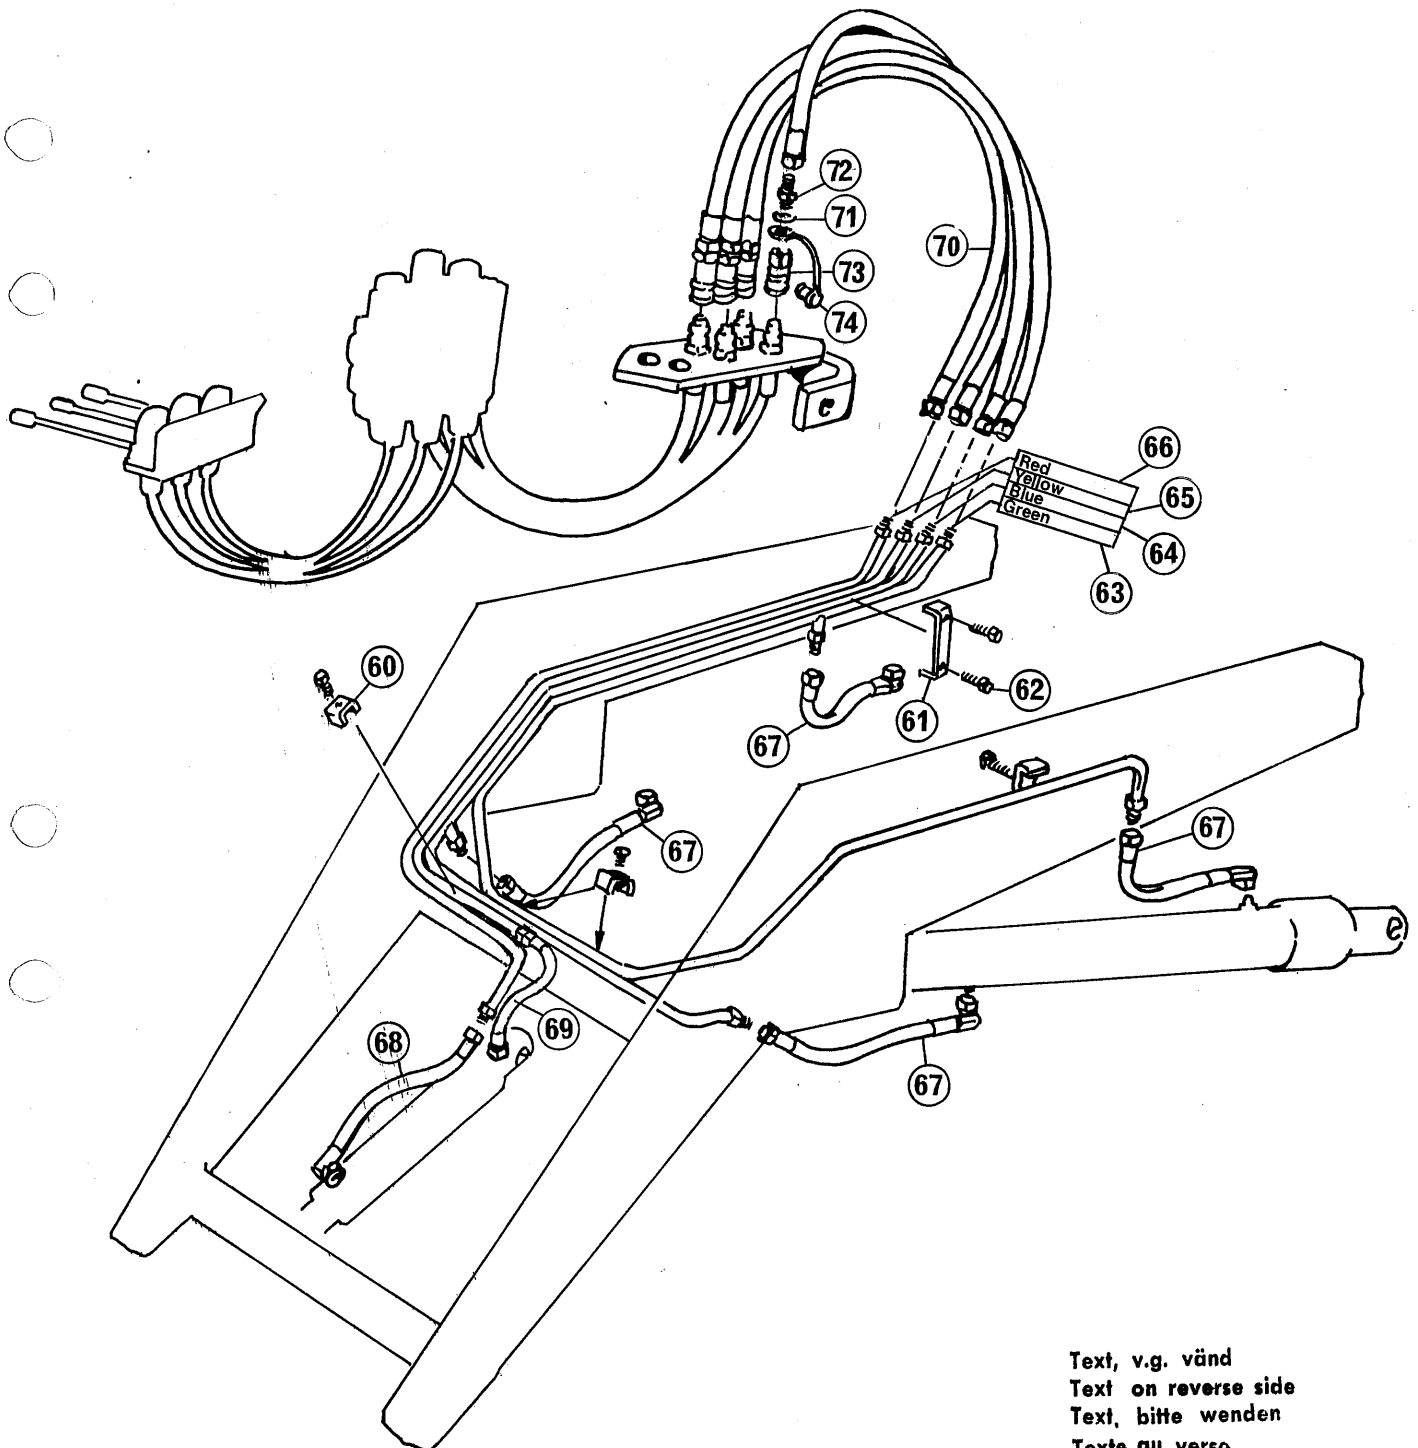

Text, v.g. vänd
Text on reverse side
Text, bitte wenden
Texte au verso

RESERVDELAR · SPARE PARTS · ERSATZTEILE · PIÉCES DE RECHANGE



2	17	012	A
---	----	-----	---

82 09 20

143 041-042

Pos. Teil Item Repère	Best.nr Part No. Bestell-Nr. Référence	Benämning / Description / Benennung / Désignation	Antal Quantity Anzahl Nombre
(US-3300..2-3)			
60	1 44 115	Rörklammer / Pipe Anchor / Rohrschelle / Bride de fixation -tuyau	(2) 4
61	1 42 614	Rörklammer / Pipe Anchor / Rohrschelle / Bride de fixation -tuyau	(4) 1
62	50 02 052	Skruv / Screw / Schraube / Vis	M6S 8 x 25 6
63	1 43 104	Oljerör / Oil Pipe / Ölleitung / Tuyau d'huile	1
64	1 43 105	Oljerör / Oil Pipe / Ölleitung / Tuyau d'huile	1
65	1 43 106	Oljerör / Oil Pipe / Ölleitung / Tuyau d'huile	1
66	1 43 107	Oljerör / Oil Pipe / Ölleitung / Tuyau d'huile	1
67	11 03 101	Slang / Hydraulic Hose / Hydraulikschlauch / Flexible	R 3/8"- 90°-300 4
68	11 03 116	Slang / Hydraulic Hose / Hydraulikschlauch / Flexible	R 3/8"- 90°-550 1
69	11 03 118	Slang / Hydraulic Hose / Hydraulikschlauch / Flexible	R 3/8"- 300 1
70	11 03 142	Slang / Hydraulic Hose / Hydraulikschlauch / Flexible	R 3/8"- 900 4
71	50 13 604	Bricka / Washer / Scheibe / Rondelle	Cu 21 x 28 4
72	11 20 011	Adapter / Adaptor / Sechskantnippel / Raccord hex.	R 3/8" x R 1/2" 4
73	50 44 127	Snabbkoppling / Quick-coupling / Schnellkupplung / Adaptateur rapide	R 1/2" (F) 4
74	50 44 130	Dammskydd / Dust Cap / Staubkappe / Pare-poussière	4
80	1 43 051 ¹⁾	MONTERINGSSATS / MOUNTING SET / ZUBEHÖRSATZ / JEU DE MONTAGE	Alt(2-sekt.) 1
	1 43 052 ²⁾	MONTERINGSSATS / MOUNTING SET / ZUBEHÖRSATZ / JEU DE MONTAGE	Alt(3-sekt.) (1)

1) Ingående detaljer / Parts Included / Einzelteile / Éléments inclus

1) Blad / Leaf / Blatt / Feuille: 6 16 121

2) Blad / Leaf / Blatt / Feuille: 6 16 126

RESERVDELAR · SPARE PARTS · ERSATZTEILE · PIÉCES DE RECHANGE

5 01 094 A



Lyftcylinder
Lift Ram
Hubzylinder
Vérin de levage

4300 (gamla)
dia. 63/40 mm


lyft 3330
föreslår
130

82.09.01

6 79 010


Pos. Teil Item Repère	Best.nr Part No. Bestell-Nr. Référence	Benämning / Description / Benennung / Désignation	Antal Quantity Anzahl Nombre
1	6 79 011	Toppmutter / Bearing / Hutmutter / Tête de vérin	1
2	6 79 012	Kolv / Piston / Kolben / Piston	1
3	6 79 023	KOLVSTÅNG / PISTON ROD / KOLBENSTANGE / TIGE DE PISTON	1
4	50 18 509	Bussning / Bushing / Buchse / Coussinet	(2)
5	6 79 024	CYLINDERÖR / PIPE RAM / ROHRZYLINDER / TUBE DE VERIN	1
6	50 18 509	Bussning / Bushing / Buchse / Coussinet	(2)
7	11 20 101	Adapter / Adaptor / Sechskantnippel / Raccord hex.	1
8	50 13 612	Bricka / Washer / Scheibe / Rondelle	1
9	50 36 133	PACKNINGSSATS / SEAL ASSY / DICHTUNGSSATZ / POCHETTE DE JOINTS	1
10	50 38 101	Avstrykare / Scraper / Abstreifer / Bague de râclage	1
11	50 38 254	Manschett / Seal / Nutring / Bague d'étanchéité	1
12	50 38 282	Kolvätning / Piston Seal / Kolbendichtung / Joint de Piston	1
13	50 37 404	O-ring / 'O' Ring / O-Ring / Joint torique	1
13	50 37 018	O-ring / 'O' Ring / O-Ring / Joint torique	1

679010

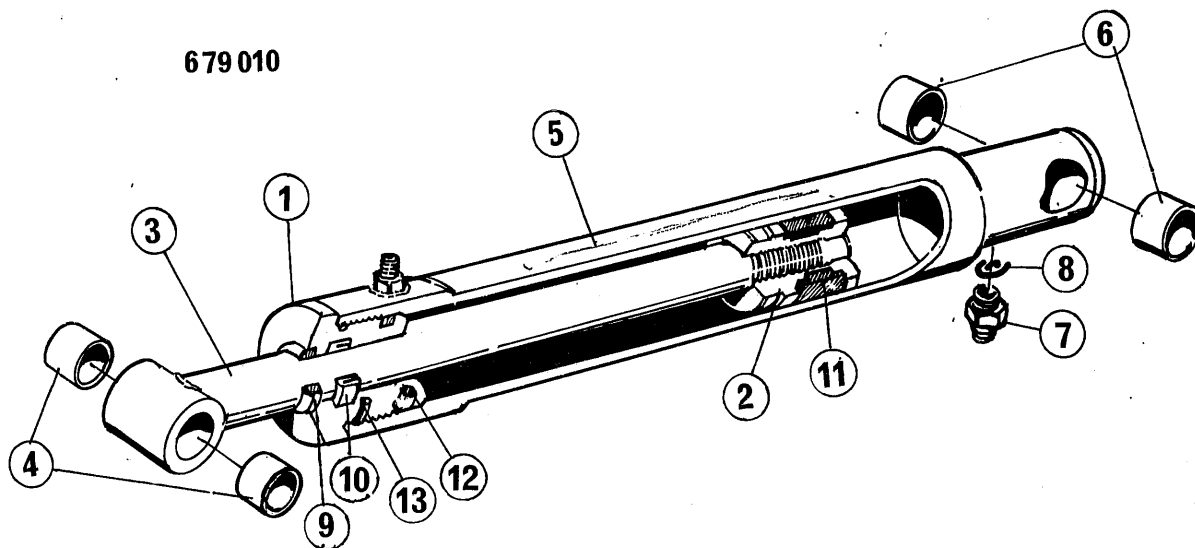

V₁ = 1,8

V₂ = 1,1

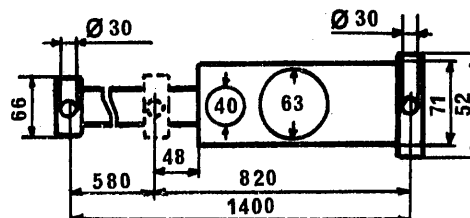

Ringaren 60 % av östra delen

RESERVDELAR · SPARE PARTS · ERSATZTEILE · PIÉCES DE RECHANGE

5 01 097 A



Redskapsylinder 3300, 3301, 3330, 3360
Bucket Ram
Arbeitsgeräte-Zylinder
Vérin de cabrage


Ø 75/40 mm
 dia.

82.09.01

svets utf. runt alas infäst
dec. 87.

6 82 010


Pos. Teil Item Repère	Best.nr Part No. Bestell-Nr. Référence	Benämning / Description / Benennung / Désignation	Antal Quantity Anzahl Nombre
1	6 82 011	Toppmutter / Bearing / Hutmutter / Tête de vérin	1
2	6 82 012	Kolv / Piston / Kolben / Piston	1
3	6 82 024	CYLINDERRÖR / PIPE RAM / ROHRZYLINDER / TUBE DE VERIN	1
4	50 18 509	Bussning / Bushing / Buchse / Coussinet	(2)
5	11 20 101	Adapter / Adaptor / Sechskantnippel / Raccord hex.	(1)
6	50 13 612	Bricka / Washer / Scheibe / Rondelle	(1)
7	6 81 023	KOLVSTÅNG / PISTON ROD / KOLBENSTANGE / TIGE DE PISTON	1
8	50 18 509	Bussning / Bushing / Buchse / Coussinet	(2)
9	5 19 021	CHOCKVENTIL / UNLOADING VALVE / ENTLADEVENTIL / CLAPET d'ANTI-CHOC	1
10	5 19 042	O-ring / 'O' Ring / O-Ring / Joint torique	(1)
11	5 19 041	O-ring / 'O' Ring / O-Ring / Joint torique	(1)
	50 36 135	PACKNINGSSATS / SEAL ASSY / DICHTUNGSSATZ / POCHETTE DE JOINTS	1
12	50 38 101	Avstrykare / Scraper / Abstreifer / Bague de râclage	(1)
13	50 38 254	Manschett / Seal / Nutring / Bague d'étanchéité	(1)
14	50 38 283	Kolytätning / Piston Seal / Kolbendichtung / Joint de Piston	(1)
15	50 37 461	O-ring / 'O' Ring / O-Ring / Joint torique	(1)
16	50 37 019	O-ring / 'O' Ring / O-Ring / Joint torique	(1)

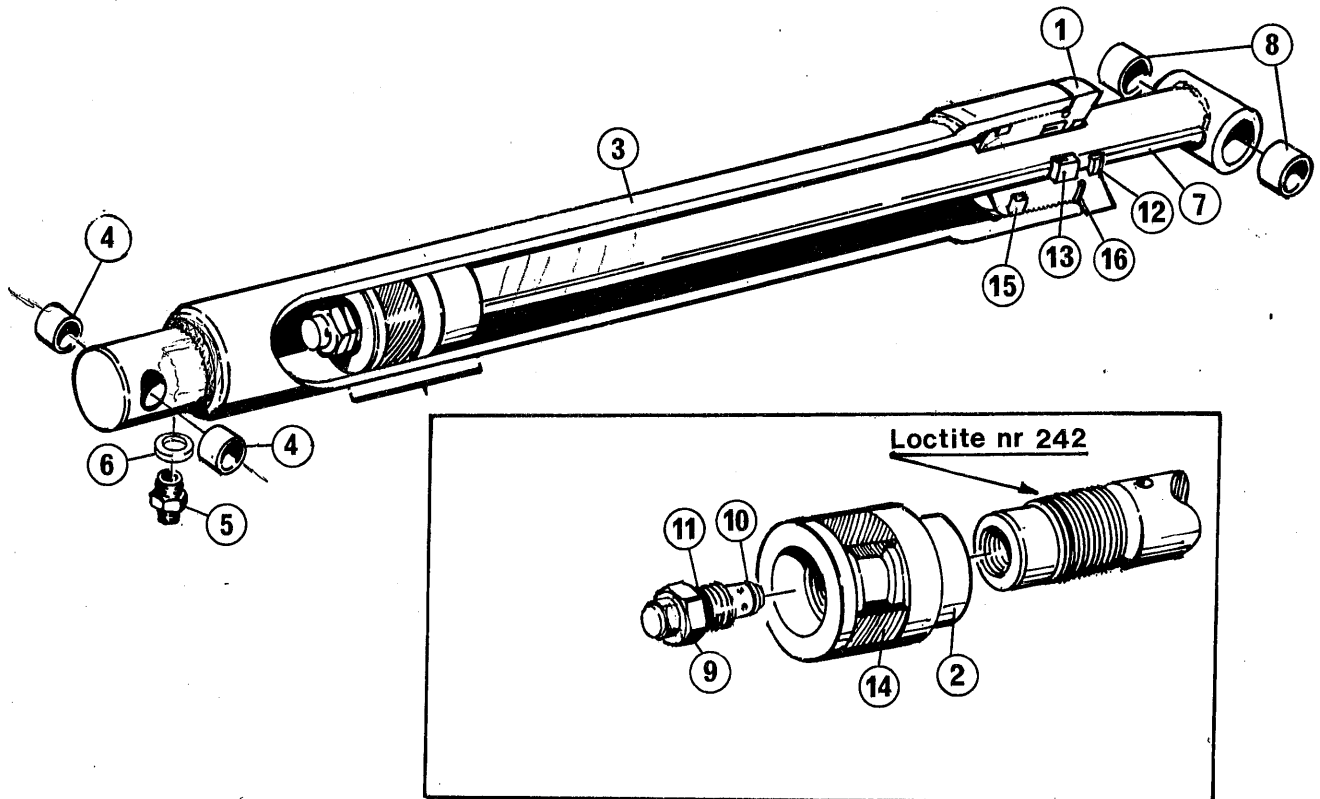

cyl. volym $V_1 = 2,2$

$V_3 = 1,6$

Kolvst. vol. $V_2 = 0,6$

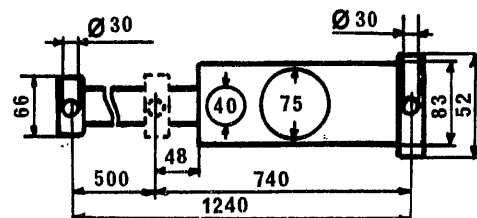



SPARE PARTS

Page No. **4 19 010 A 1**

Date **88 12 01**

Instr. No. **21 03 705**

Replacing

Design

Rörsats
Pipe Set
Rohrsatz
Jeu de tuyaux

3 (1/2")

**QUICKE
2300**

(System US)

Set - Part No.

1 43 066

Pos / Item
Tell / Repère

Best.Nr.
Part No.


Benämning / Description / Benennung / Désignation

Antal/Qty
Anzahl/Nombre

1	1 42 108	Rör / Pipe / Rohr / Tuyau	2
2	1 43 109	Rör / Pipe / Rohr / Tuyau	1
3	1 43 110	Rör / Pipe / Rohr / Tuyau	1
5	1 44 115	Klammer / Cramp / Schelle / Crampon	2
6	50 02 052	Skruv / Screw / Schraube / Vis	2
7	11 20 161	Adapter / Adaptor / Sechskantnippel / Raccord union	2
8	50 13 604	Kopparbricka / Copper Washer / Kupferscheibe / Rondelle en cuivre	4
9	50 44 127	Snabbkoppling / Quick Coupling / Schnellkupplung / Raccord rapide	3
10	50 44 128	Snabbkoppling / Quick Coupling / Schnellkupplung / Raccord rapide	1
11	50 44 129	Dammskydd / Dust Cap / Staupkappe / Pare-poussière	1
12	50 44 130	Dammskydd / Dust Cap / Staupkappe / Pare-poussière	3
13	11 20 011	Adapter / Adaptor / Sechskantnippel / Raccord union	2
16	11 03 142	Slang / Hose / Schlauch / Flexible	2

(2)
M6S 8 x 25
R 3/8"
Cu 21 x 28
R 1/2" (F)
R 1/2" (M)

R 3/8" - R 1/2"
R 3/8" - 900



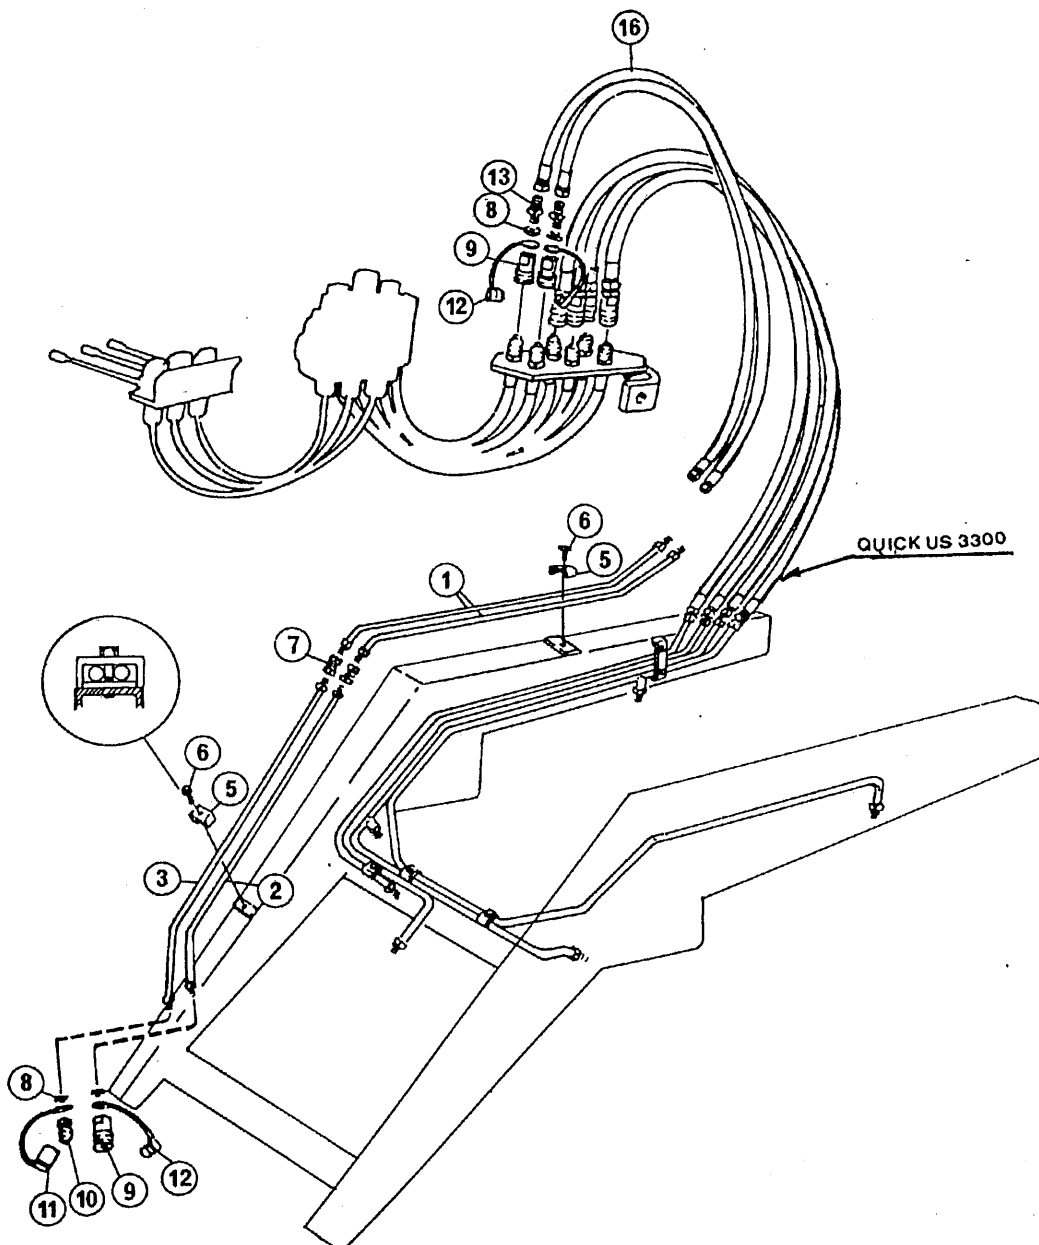




Ventilsats
Valve Set
Ventilsatz
Colis distributeur

KONTAK HF
PUSH - PULL

302 493

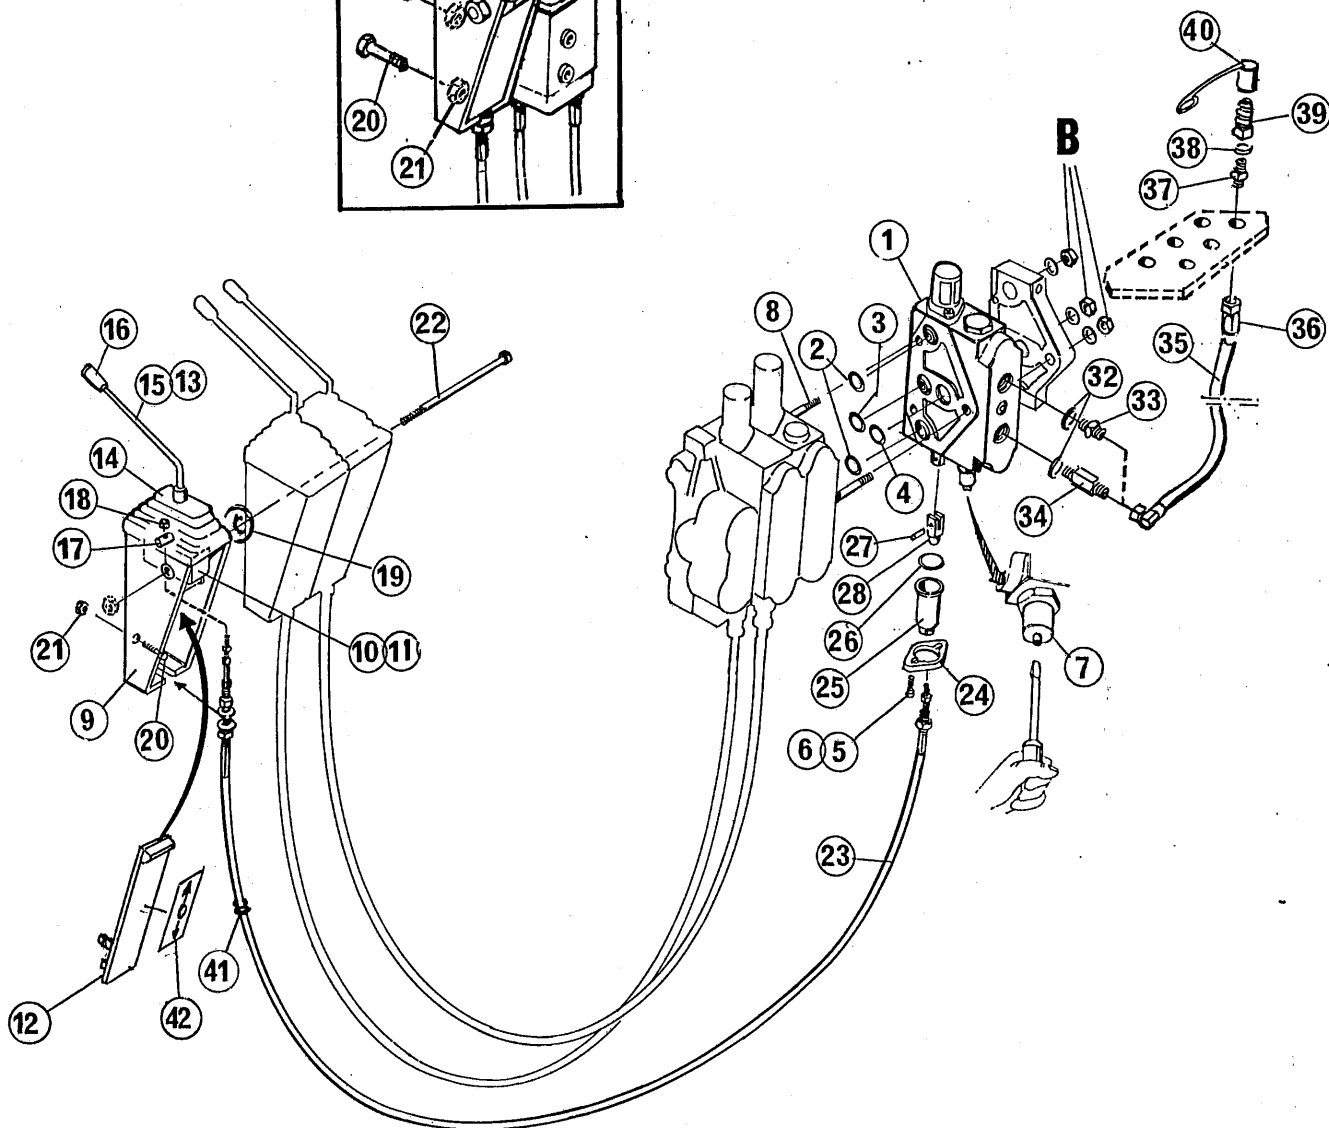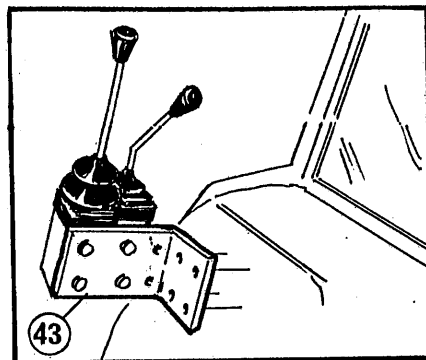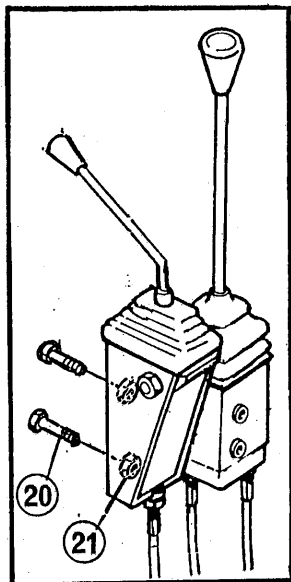

Text, v.g. vänd
Text on reverse side
Text, bitte wenden
Texte au verso



302493

Pos. Teil Item Repère	Best.nr Part No. Bestell-Nr. Référence	Benämning / Description / Benennung / Désignation	Antal Quantity Anzahl Nombre
--------------------------------	---	---	---------------------------------------

3 02 493

1	5 21 205 ¹⁾	Ventilsektion / Valve Section / Ventilsektion / Section de soupape	1
2	5 18 025	O-ring / 'O'Ring / O-Ring / Joint torique	(2)
3	5 18 026	O-ring / 'O'Ring / O-Ring / Joint torique	(1)
4	5 18 027	O-ring / 'O'Ring / O-Ring / Joint toriquepe	(1)
5	5 19 049	Skruv / Screw / Schraube / Visuide U6S 1/4" UNC x 3/4"	(2)
6	50 13 403	Bricka / Washer / Scheibe / Rondelle	(1)
7	5 21 221*)	KONVERTER / CONVERTER / KONVERTER / CONVERTISSEUR HF	1
8	5 19 012	Bult / Bolt / Bolzen / Boulon	3
	3 02 620	Reglage / Control Device / Bedienungsvorrichtung / Système de commande	1
9	3 02 624	Spakhus / Lever housing / Hebelgehäuse / Carter de Levier	(1)
10	3 02 627	Spakfäste / Lever support / Hebelhalter / Support pour Levier	(1)
11	3 02 631	Rör / Pipe / Rohr / Tuyau	(1)
12	50 22 115	Plastlock / Plastic Cap / Kunststoffdeckel / Capot plastique	1
13	50 11 054	Mutter / Nut / Mutter / Ecrou M6M 10	(1)
14	50 22 078	Damask / Spat / Gamasche / Guêtre	(1)
15	3 02 725	Spak / Lever / Hebel / Levier	(1)
16	5 21 104	Knopp /Knob / Knopf / Bouton	(1)
17	11 16 308	Tapp / Pin / Zapfer / Goujon	(1)
18	50 11 051	Mutter / Nut / Mutter / Ecrou M 5	1
19	50 13 177	Bricka / Washer / Scheibe / Rondell TBR5B 10,5 x 28 x 6	1
20	50 02 051	Skruv / Screw / Schraube / Vis M6S 8 x 20	2
21	50 11 053	Mutter / Nut / Mutter / Ecrou M6M 8	2
22	50 02 085	Skruv / Screw / Schraube / Vis M6S 10 x 140	1
23	50 20 311	Kabel / Cable / Kabel / Câble 1600	1
24	50 20 310	Fläns / Flange / Flansche / Bride	1
25	50 20 309	Hylsa / Casing / Hülse / Douille	1
26	50 13 901	Packning / Seal / Dichtung / Fermeture	1
27	50 20 229	Tapp / Pin / Zapfer / Goujon	1
28	50 20 228	Gaffel / Fork / Gabel / Fourche	1
32	50 13 853	Bricka / Washer / Scheibe / Rondelle 21,5 x 28,6 T REDO	2
33	11 20 011	Adapter / Adapter / Sechskantnippel / Adaptateur R 1/2" - R 3/8"	1
34	11 20 119	Adapter / Adapter / Sechskantnippel / Adaptateur R 1/2" - R 3/8" - 65	1
35	11 03 141	Slang / Hose / Schlauch / Flexible R 3/8"x90° - 2000	2
36	50 33 053	Slangkoppling / Hose connection / Schlauchanschluss/ R 3/8"	2
		Raccord flexible	
37	11 20 158	Adapter / Adapter / Sechskantnippel / Adaptateur R 1/2" - R 3/8"	2
38	50 13 604	Bricka / Washer / Scheibe / Rondelle Cu 21 x 28 x 2	2
39	50 44 128	Snabbkoppling / Quick-coupling / Schnellkupplung / R 1/2" (M)	2
		Raccord rapide	
40	50 44 129	Dammskydd / Dust-cap / Staubkappe / Pare-poussière	2
41	50 22 030	Kabelgenomföring / Conduit Entry / Kabeldurchführung / Traversée de câble	1
42	11 23 290	Dekal / Transfer / Abziehbild / Auto-collant	1
43	3 02 716	Reglagefäste/Control Device Support/Bedienungsvorrichtungshalter/ Support de dispositif de commande	1

*) EXTRA TILLBEHÖR / ADDITIONAL EQUIPMENT / ZUSÄTZLICHE AUSRÜSTUNG / EQUIPEMENT SUPPLEMENTAIRE

1) Ingående detaljer / Parts included / Einzelteile / Composant inclus
Blad / Leaf / Blatt / Feuille: 6 17 108 (6)



SPARE PARTS

Page No. 6 17 108 C 1

Date 88 07 01


Instr. No.

Replacing 617108 B

Design


Ventil
Control Valve
Steuergerät
Distributeur

KONTAK HF




Set - Part No.


521 215 - 216

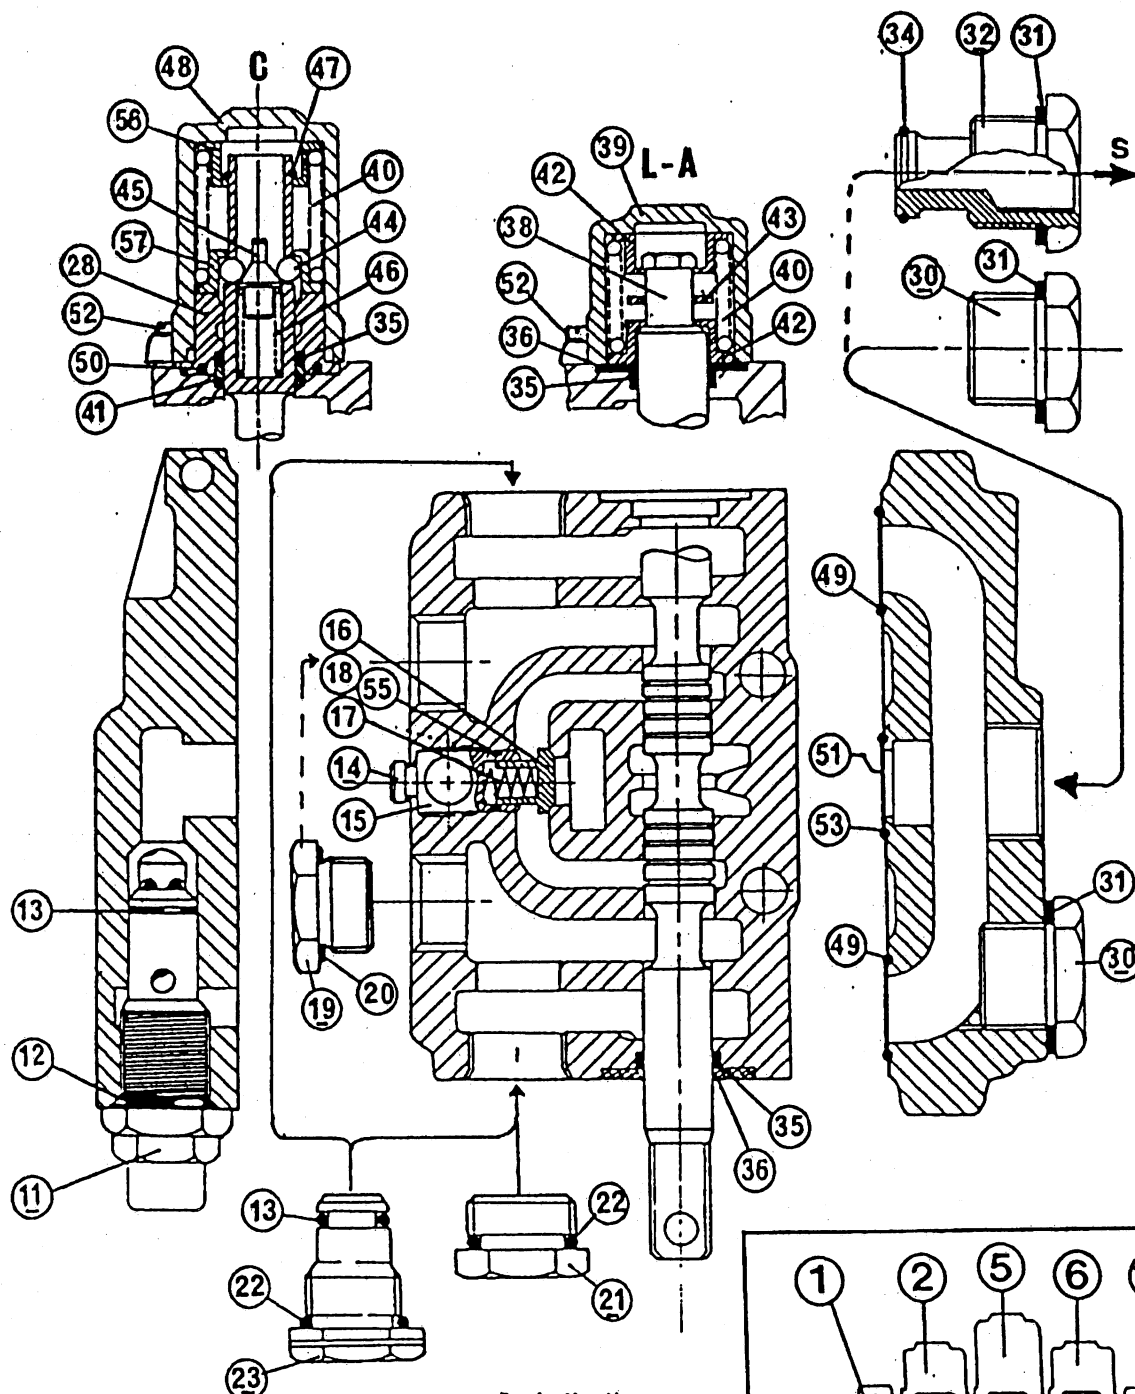

Production No.
(Week./year) = 34-88
From = 41-88

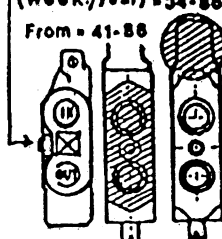

Text, v.g. vänd.
Text on reverse side.
Text, bitte wenden.
Texte au verso.

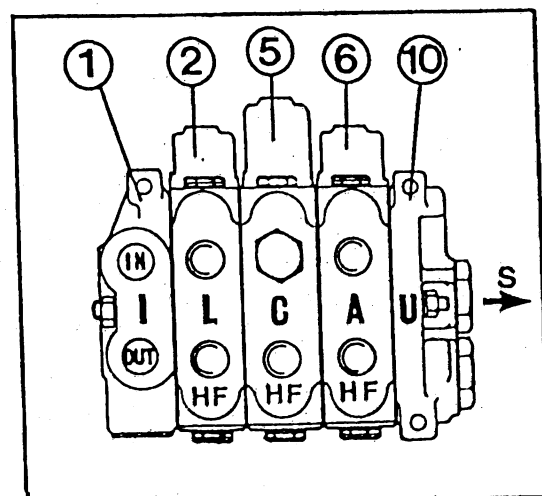



SPARE PARTS

Page No. **6 17 108 C 2**


Date **88 07 01**

Instr. No.

Replacing

617108 B

Design

**Ventil
Control Valve
Steuergerät
Distributeur**
KONTAK HF


Set - Part No.

5 21 215 - 216

Pos / Item
Tell / Repère

Best.Nr.
Part No.

Benämning / Description / Benennung / Désignation

Antal/Qty
Anzahl/Nombre

		X	X	X	-	X	
		I	L	C	A	U	
	5 21 215						
	5 21 216						
1	5 19 013						
3	5 21 262						
4	5 21 265						
6	5 21 261						
10	5 18 021						
11	5 19 019						
12	5 19 037						
13	5 19 036						
14	5 21 237²⁾						
15	5 21 222²⁾						
16	5 21 238²⁾						
17	5 21 240²⁾						
18	5 21 241²⁾						
19	5 19 045						
20	50 13 853						
21	5 19 044						
22	5 19 041						
23	5 21 235						
28	5 21 245¹⁾						
30	5 19 025						
31	50 13 854						
32	5 18 022						
34	5 18 024						
35	5 19 038						
36	5 21 226						
38	5 21 228						
39	5 21 230						
40	5 19 030						
41	5 21 229						
42	5 19 062						
43	5 21 232						
44	5 21 231						
45	5 21 246¹⁾						
46	5 21 247¹⁾						
47	5 19 031						
48	5 19 029						
49	5 18 026						
50	5 18 026 ²⁾						
51	5 18 027						
52	5 19 049						
53	5 21 242²⁾						
55	5 21 243²⁾						
56	5 21 248¹⁾						
57	5 21 249¹⁾						

Note

- 1) Valves from 34-86 (Production week / year)
- 2) Valves from 41-86 (Production week / year)

*) Packningssats / Seal Ass'y / Dichtungssatz / Pochette de joints, Ref.No. 50 36 202

RESERVDELAR · SPARE PARTS · ERSATZTEILE · PIÉCES DE RECHANGE

6	16	081	A
---	----	-----	---

82 10 01




Monteringssats
Mounting Set
Zubehörsatz
Jeu de Montage

302 408

KONTAK



US

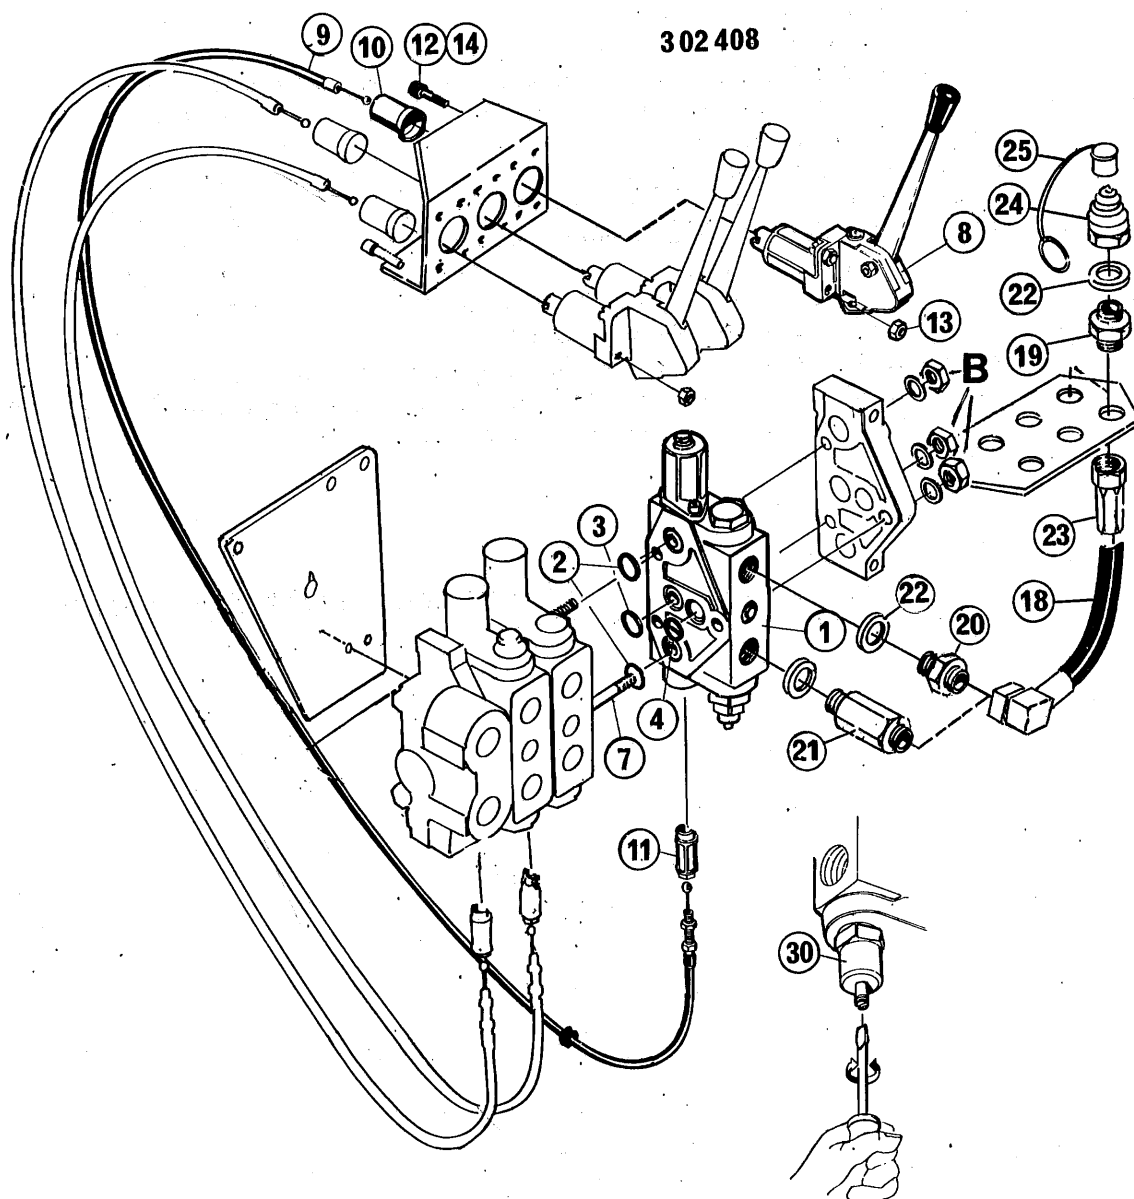

Text, v.g. vänd
Text on reverse side
Text, bitte wenden
Texte au verso

RESERVDLAR · SPARE PARTS · ERSATZTEILE · PIÉCES DE RECHANGE



6	16	081	A
---	----	-----	---

82 10 01

302 408

Pos. Teil Item Repère	Best.nr Part No. Bestell-Nr. Référence	Benämning / Description / Benennung / Désignation	Antal Quantity Anzahl Nombre
	3 02 408		
1	5 21 061	Ventilsektion / Valve Section / Steuergerätsektion / Section de soupape	1
2	5 18 025	O-ring / 'O' Ring / O-Ring / Joint torique	(2)
3	5 18 026	O-ring / 'O' Ring / O-Ring / Joint torique	(1)
4	5 18 027	O-ring / 'O' Ring / O-Ring / Joint torique	(1)
7	5 19 012	Bult / Bolt / Bolzen / Boulon	
8	5 21 084	Reglage / Control Device / Bedienungsvorrichtung / Système de commande	3
9	5 21 087	Kabel / Cable / Kabel / Câble	1
10	5 21 085	Plæsthylsa / Nylon Cap / Nylonhülse / Douille Plastic	1
11	5 21 086	Justeringshylsa / Setting Cap / Einstellhülse / Douille de mise au point	1
12	50 04 031	Skruv / Screw / Schraube / Vis	1
13	50 11 052	Mutter / Nut / Mutter / Ecrou	2
14	50 13 108	Bricka / Washer / Scheibe / Rondelle	2
18	11 03 141	Slang / Hydraulic Hose / Hydraulikschlauch / Flexible	2
19	11 20 158	Adapter / Adaptor / Sechskantnippel / Raccord hex	2
20	11 20 011	Adapter / Adaptor / Sechskantnippel / Raccord hex	2
21	11 20 119	Adapter / Adaptor / Sechskantnippel / Raccord hex	1
22	50 13 604	Kopperbricka / Washer / Scheibe / Rondelle	1
23	50 33 053	Slangkoppling / Hose fitting / Schlauchanschluss / Raccord-flexible	4
24	50 44 128	Snabbkoppling / Quick-coupling / Schnellkupplung / Adaptateur rapide	2
25	50 44 129	Dammskydd / Dust Cap / Staubkappe / Pare-poussière	2

EXTRA TILLBEHÖR / ADDITIONAL EQUIPMENT / ZUSÄTZLICHE AUSRÜSTUNG / EQUIPEMENT SUPPLEMENTAIRE

30	5 19 023	Konverter / Converter / Konverter / Convertisseur
----	----------	---

2103706



82 0920

Monteringsanvisning
 Mounting instructions
 Anbauanleitung
 Instructions de montage

— Rörsats
 — Pipe Set
 — Rohrsatz
 — Jeu de Tuyau


143067

4

QUICK (US)

2300- 3300

143067

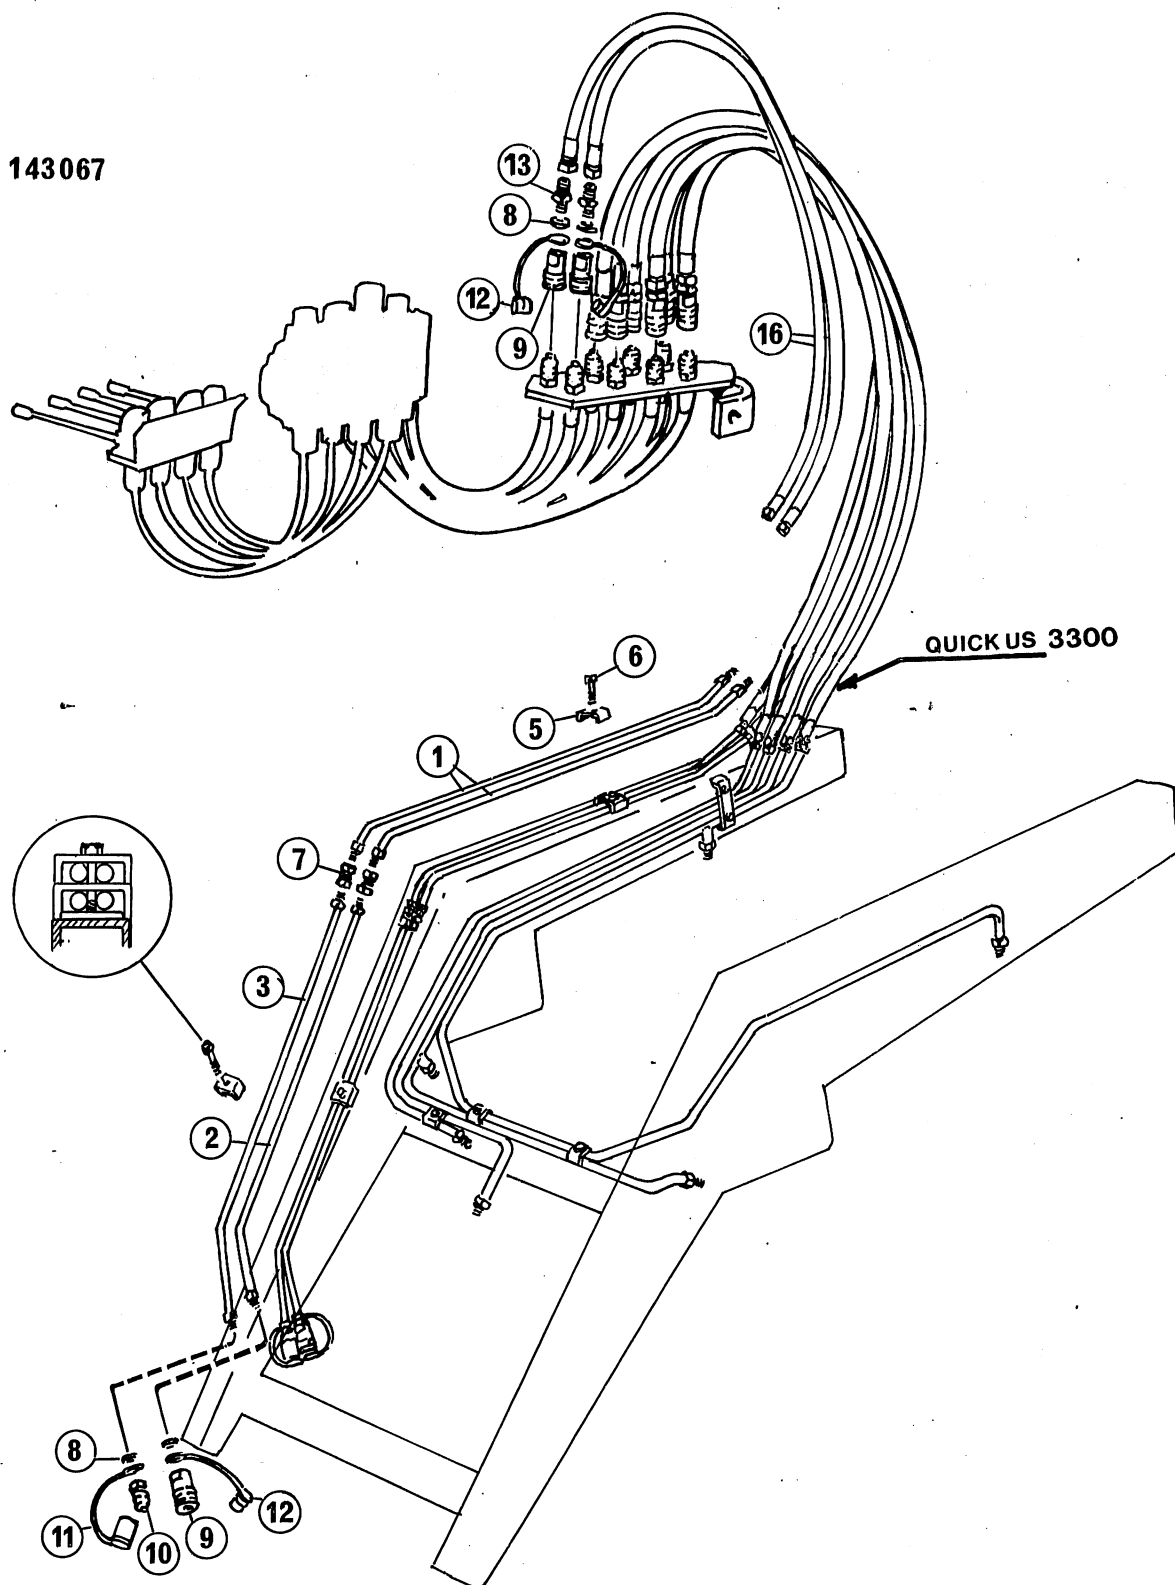

Text, v.g. vänd
 Text on reverse side
 Text, bitte wenden
 Texte au verso

RESERVDELAR

SPARE PARTS

ERSATZTEILE

PIECES DE RECHANGE

Pos. Teil Item Repère	Best.nr Part No. Bestell-Nr. Référence	Benämning / Description / Benennung / Désignation	Antal Quantity Anzahl Nombre
1 43 067			
1	1 43 111	Rör / Pipe / Rohr / Tuyau	2
2	1 43 112	Rör / Pipe / Rohr / Tuyau	1
3	1 43 113	Rör / Pipe / Rohr / Tuyau	1
5	1 44 115	Klammer / Pipe Cramp / Rohrschelle / Crampon	2
6	50 02 056	Skruv / Screw / Schraube / Vis	(2)
7	11 20 161	Adapter / Adapter / Sechskantnippel / Raccord hex.	M6S 8 x 50
8	50 13 604	Kopparbricka / Washer / Scheibe / Rondelle	R 3/8"
9	50 44 127	Snabbkoppling / Quickcoupling / Schnellkupplung / Adaptateur rapide	Cu 21 x 28
10	50 44 128	Snabbkoppling / Quickcoupling / Schnellkupplung / Adaptateur rapide	R 1/2" (F)
11	50 44 129	Dammskydd / Dust Cap / Staubkappe / Pare-poussière	R 1/2" (M)
12	50 44 130	Dammskydd / Dust Cap / Staubkappe / Pare-poussière	1
13	11 20 011	Adapter / Adapter / Sechskantnippel / Raccord hex.	3
16	11 03 142	Slang / Hydraulic Hose / Hydraulikschlauch / Flexible hydraulique	R 3/8" - R 1/2"
			R 3/8"-900

RESERVDELAR · SPARE PARTS · ERSATZTEILE · PIECES DE RECHANGE



Ventilsats
Valve Set
Ventilsatz
Colis distributeur



KONTAK HF
PUSH - PULL

3 02 494

6	17	091	C
---	----	-----	---

87 06 11

SYSTEM
US

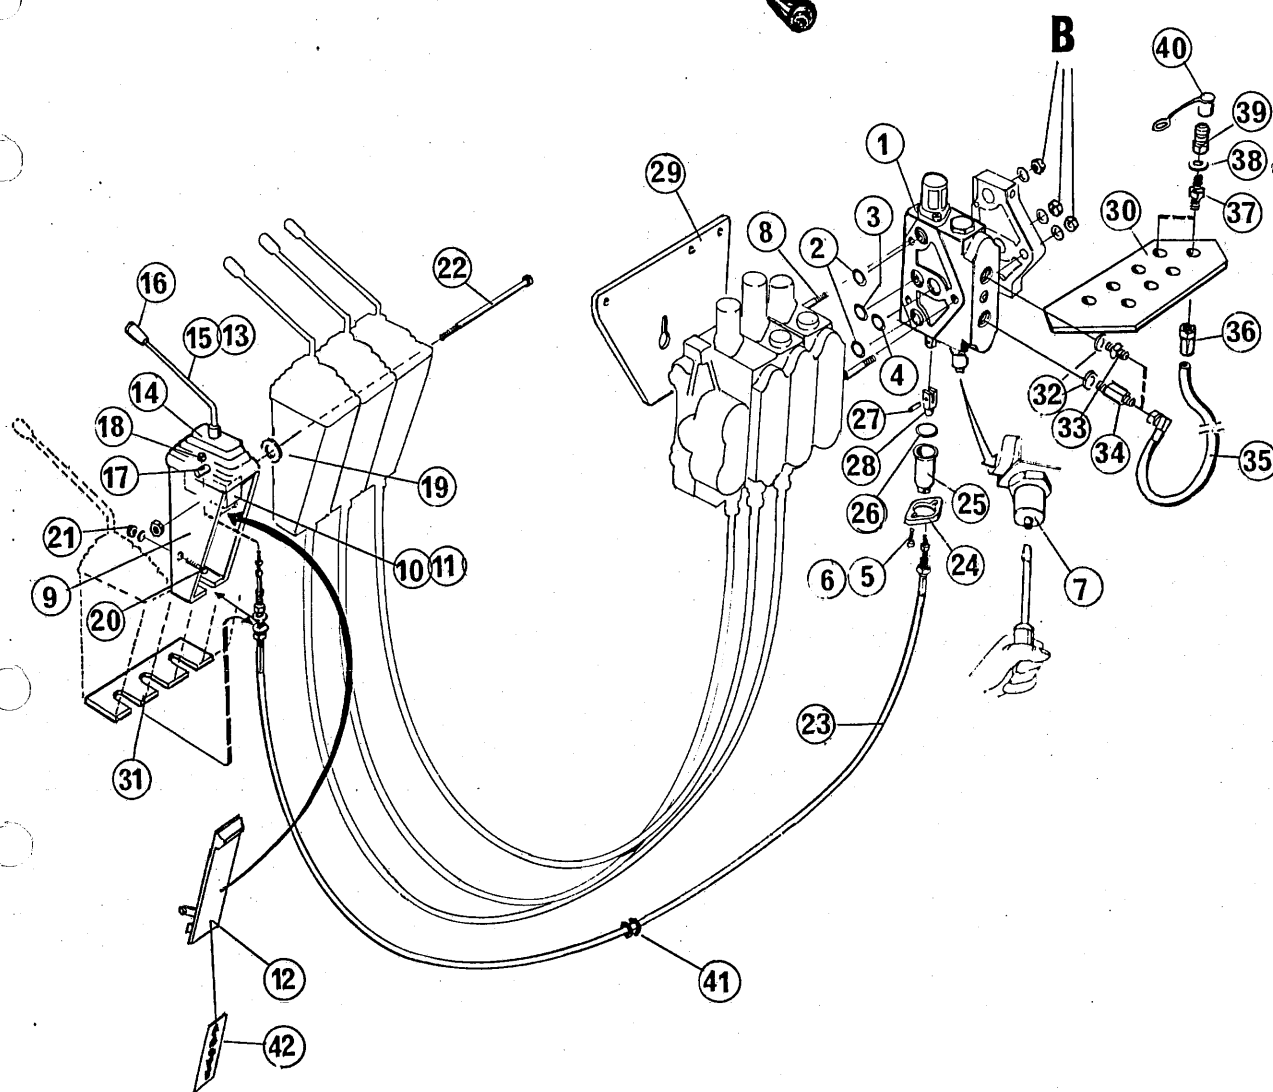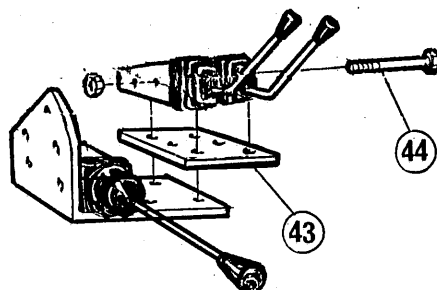

RESERVDELAR · SPARE PARTS · ERSATZTEILE · PIÉCES DE RECHANGE



6	17	091	C
---	----	-----	---

87 06 11

3 02 494

Pos. Teil Item Repère	Best.nr Part No. Bestell-Nr. Référence	Benämning / Description / Benennung / Désignation	Antal Quantity Anzahl Nombre
--------------------------------	---	---	---------------------------------------

3 02 494

1	5 21 205 ¹⁾	Ventilsektion / Valve Section / Ventilsektion / Section de soupape	1
2	5 18 025	O-ring / 'O'Ring / O-Ring / Joint torique	(2)
3	5 18 026	O-ring / 'O'Ring / O-Ring / Joint torique	(1)
4	5 18 027	O-ring / 'O'Ring / O-Ring / Joint torique	(1)
5	5 19 049	Skruv / Screw / Schraube / Visuide	(2)
6	50 13 403	Bricka / Washer / Scheibe / Rondelle	(1)
7	5 21 221	KONVERTER / CONVERTER / KONVERTER / CONVERTISSEUR	1
8	5 19 067	Bult / Bolt / Bolzen / Boulon	3
	3 02 620	Reglage / Control Device / Bedienungsvorrichtung / Système de commande	1
9	3 02 624	Spakhus / Lever housing / Hebelgehäuse / Carter de Levier	(1)
10	3 02 627	Spakfäste / Lever support / Hebelhalter / Support pour Levier	(1)
11	3 02 631	Rör / Pipe / Rohr / Tuyau	(1)
12	50 22 115	Plastlock / Plastic Cover / Kunststoffdeckel / Capot plastique	(1)
13	50 11 054	Mutter / Nut / Mutter / Ecrou	(1)
14	50 22 078	Damask / Spat / Gamasche / Guêtre	(1)
15	3 02 725	Spak / Lever / Hebel / Levier	(1)
16	5 21 104	Knopp / Knob / Knopf / Bouton	(1)
17	11 16 308	Tapp / Pin / Zapfer / Goujon	(1)
18	50 11 051	Mutter / Nut / Mutter / Ecrou	1
19	50 13 177	Bricka / Washer / Scheibe / Rondell	1
20	50 02 051	Skruv / Screw / Schraube / Vis	2
21	50 11 053	Mutter / Nut / Mutter / Ecroube	2
22	50 02 087	Skruv / Screw / Schraube / Vis	1
23	50 20 311	Kabel / Cable / Kabel / Câble	1
24	50 20 310	Fläns / Flange / Flansche / Bride	1
25	50 20 309	Hylsa / Casing / Hülse / Douille	1
26	50 13 901	Packning / Seal / Dichtung / Fermeture	1
27	50 20 229	Tapp / Pin / Zapfer / Goujon	1
28	50 20 228	Gaffel / Fork / Gabel / Fourche	1
29	3 02 604	Ventilfäste / Valve Support / Halterung / Support de distributeur	1
30	3 02 618	Konsol / Bracket / Halter / Support de Fixation	1
31	3 02 637	Reglagefäste / Control Support / Bedienungshalter / Support de commande	1
32	50 13 853	Bricka / Washer / Scheibe / Rondelle	2
33	11 20 011	Adapter / Adapter / Sechskantnippel / Adaptateur	1
34	11 20 119	Adapter / Adapter / Sechskantnippel / Adaptateur	1
35	11 03 141	Slang / Hose / Schlauch / Flexible	2
36	50 33 053	Slangkoppling / Hose connection / Schlauchanschluss/ Raccord flexible	2
37	11 20 158	Adapter / Adapter / Sechskantnippel / Adaptateur	2
38	50 13 604	Bricka / Washer / Scheibe / Rondelle	2
39	50 44 128	Snabbkoppling / Quick-coupling / Schnelkupplung / Raccord rapide	2
40	50 44 129	Dammskydd / Dust-cap / Staubkappe / Pare-poussière	2
41	50 22 030	Kabelgenomföring / Conduit Entry / Kabeldurchführung / Traversée de câble	1
42	11 23 290	Dekal / Transfer / Abziehbild / Auto-collant	1
43	3 02 679	Fästplatta / Support Plate / Festplatte / Plaque de support	1
44	50 20 086	Skruv / Screw / Schraube / Vis	1

1) Ingående detaljer / Parts included / Einzelteile / Composant inclus
Blad / Leaf / Blatt / Feuille: 6 17 108 (6)



SPARE PARTS

Page No. 6 17 108 C 1

Date 88 07 01


Instr. No.

Replacing 617108 B

Design


Ventil
Control Valve
Steuergerät
Distributeur

KONTAK HF




Set - Part No.


521 215 - 216

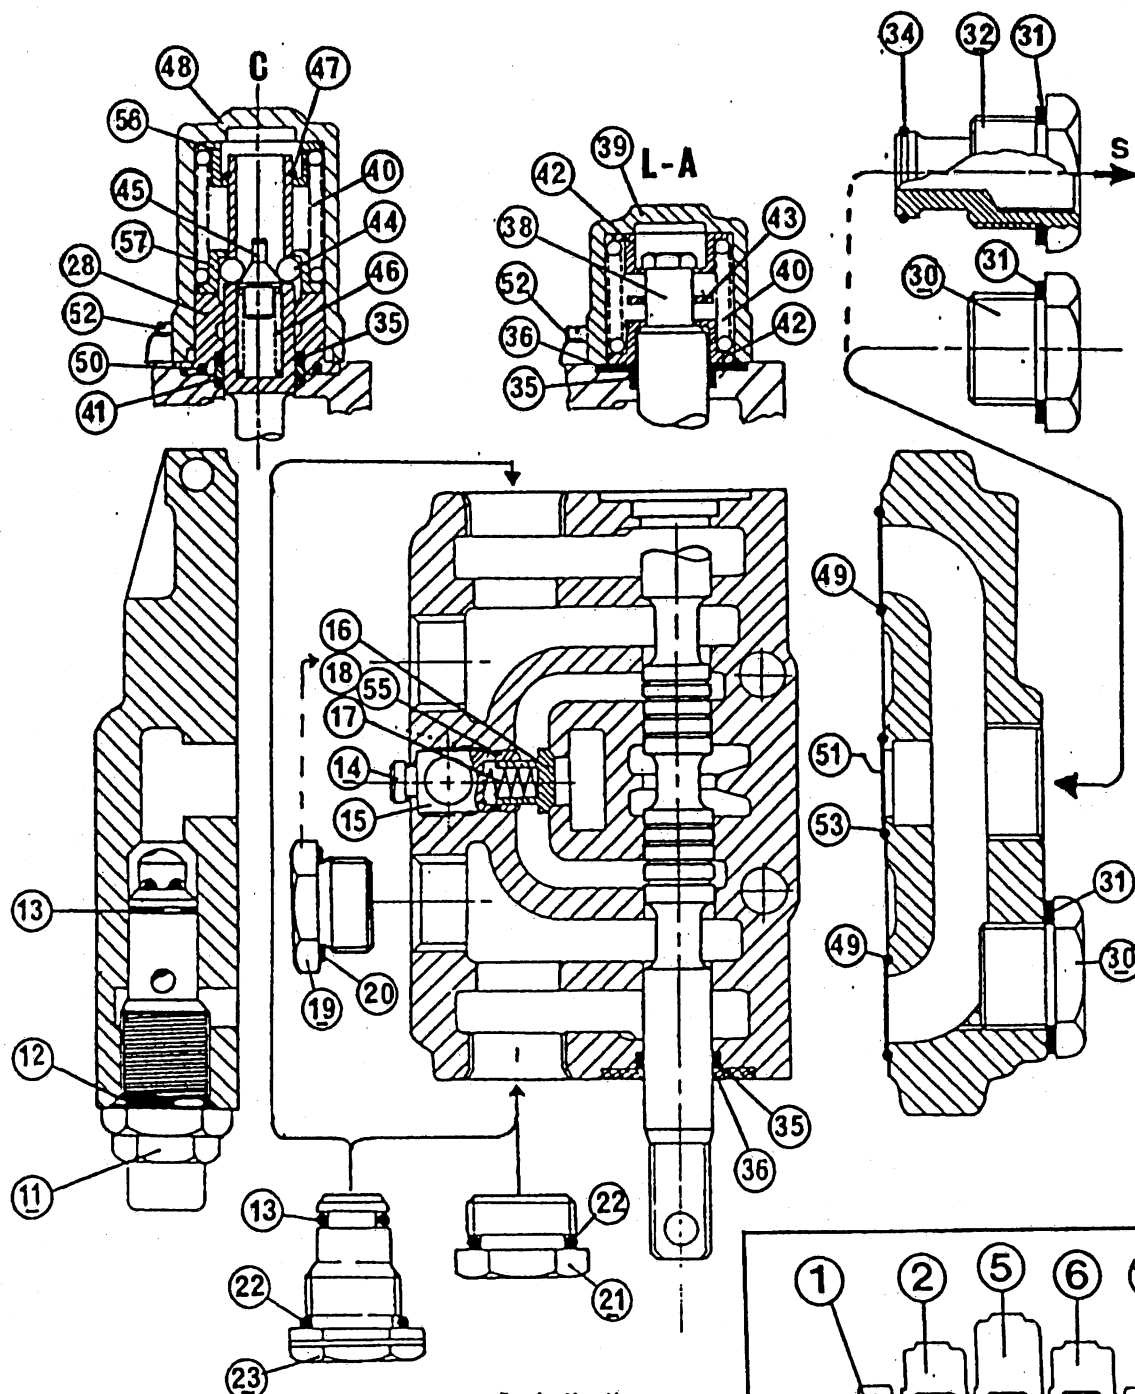

Production No.
(Week./year) = 34-88
From = 41-88

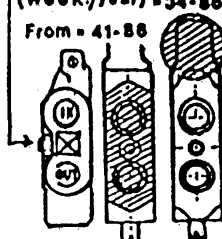

Text, v.g. vänd.
Text on reverse side.
Text, bitte wenden.
Texte au verso.

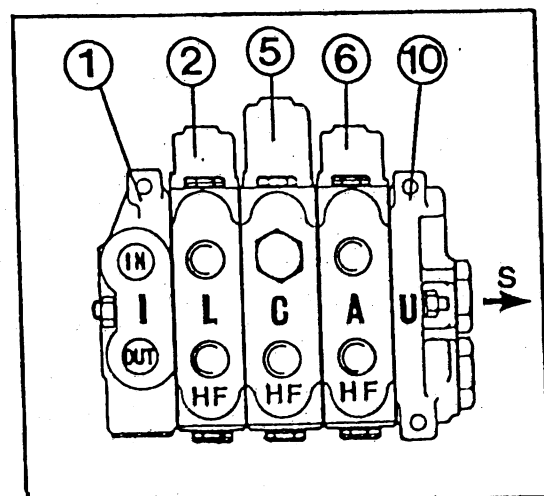



SPARE PARTS

Page No. **6 17 108 C 2**


Date **88 07 01**

Instr. No.

Replacing

617108 B

Design

**Ventil
Control Valve
Steuergerät
Distributeur**
KONTAK HF


Set - Part No.

5 21 215 - 216

Pos / Item
Tell / Repère

Best.Nr.
Part No.

Benämning / Description / Benennung / Désignation

Antal/Qty
Anzahl/Nombre

		X	X	X	-	X	
		I	L	C	A	U	
	5 21 215						
	5 21 216						
1	5 19 013						
3	5 21 262						
4	5 21 265						
6	5 21 261						
10	5 18 021						
11	5 19 019						
12	5 19 037						
13	5 19 036						
14	5 21 237²⁾						
15	5 21 222²⁾						
16	5 21 238²⁾						
17	5 21 240²⁾						
18	5 21 241²⁾						
19	5 19 045						
20	50 13 853						
21	5 19 044						
22	5 19 041						
23	5 21 235						
28	5 21 245¹⁾						
30	5 19 025						
31	50 13 854						
32	5 18 022						
34	5 18 024						
35	5 19 038						
36	5 21 226						
38	5 21 228						
39	5 21 230						
40	5 19 030						
41	5 21 229						
42	5 19 062						
43	5 21 232						
44	5 21 231						
45	5 21 246¹⁾						
46	5 21 233¹⁾						
47	5 19 031						
48	5 19 029						
49	5 18 026						
50	5 18 025						
51	5 18 027						
52	5 19 049						
53	5 21 242²⁾						
55	5 21 243²⁾						
56	5 21 248¹⁾						
57	5 21 249¹⁾						

Note

- 1) Valves from 34-86 (Production week / year)
- 2) Valves from 41-86 (Production week / year)

*) Packningssats / Seal Ass'y / Dichtungssatz / Pochette de joints, Ref.No. 50 36 202

RESERVDELAR · SPARE PARTS · ERSATZTEILE · PIÉCES DE RECHANGE



6	16	091	A
---	----	-----	---

82 10 01



Monteringssats
Mounting Set
Zubehörsatz
Jeu de Montage

302 409

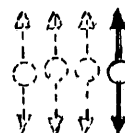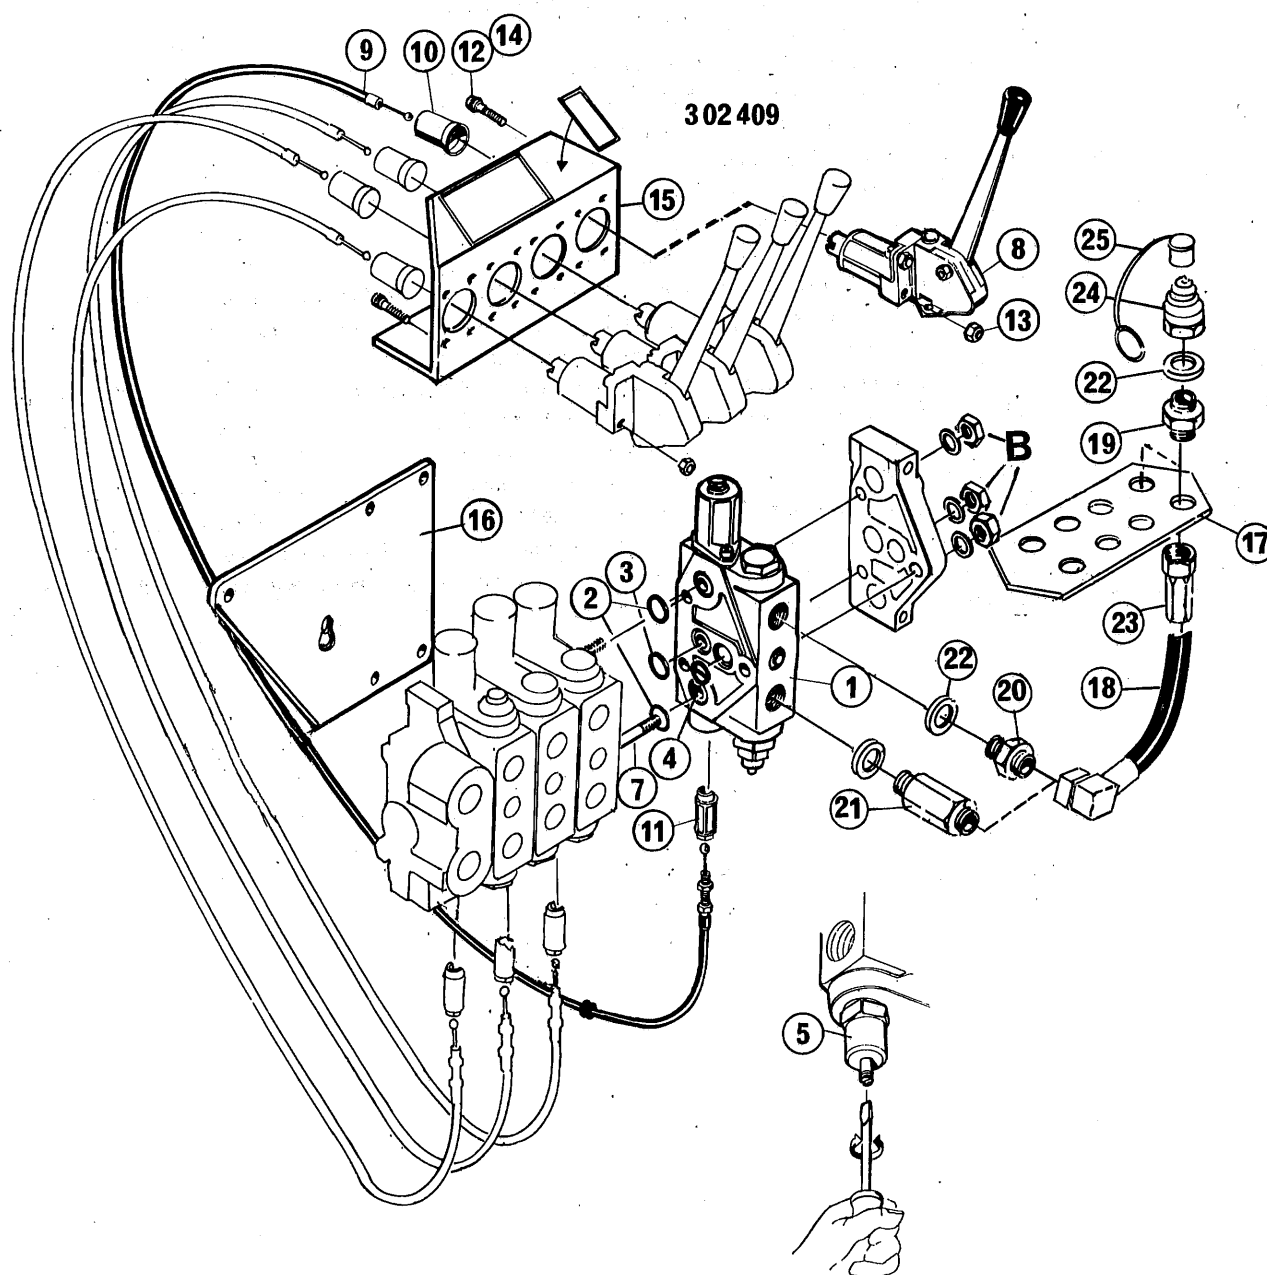KONTAK**US**

Text, v.g. vänd
 Text on reverse side
 Text, bitte wenden
 Texte au verso

RESERVDELAR · SPARE PARTS · ERSATZTEILE · PIÉCES DE RECHANGE



6	16	091	A
---	----	-----	---

8210 01

3 02 409

Pos. Teil Item Repère	Best.nr Part No. Bestell-Nr. Référence	Benämning / Description / Benennung / Désignation	Antal Quantity Anzahl Nombre
	3 02 409		
1	5 21 068	Ventilsektion / Valve Section / Steuergerätsektion / Section de soupape	1
2	5 18 025	O-ring / 'O' Ring / O-Ring / Joint torique	(2)
3	5 18 026	O-ring / 'O' Ring / O-Ring / Joint torique	(1)
4	5 18 027	O-ring / 'O' Ring / O-Ring / Joint torique	(1)
5	5 19 023	KONVERTER / Converter / Konverter / Convertisseur	(1)
7	5 19 067	Bult / Bolt / Bolzen / Boulon	(1)
8	5 21 084	Reglage / Control Device / Bedienungsvorrichtung / Système de commande	3
9	5 21 087	Kabel / Cable / Kabel / Câble	1
10	5 21 085	Plasthylsa / Nylon Cap / Nylonhülse / Douille Plastic	1
11	5 21 086	Justeringshylsa / Setting Cap / Einstellhülse / Douille de mise au point	1
12	50 04 031	Skruv / Screw / Schraube / Vis	2
13	50 11 052	Mutter / Nut / Mutter / Erou	2
14	50 13 108	Bricka / Washer / Scheibe / Rondelle	2
15	3 02 602	Reglagefäste / Control Support / Bedienungshalter / Support de commande	1
16	3 02 604	Ventilfäste / Valve Support / Halterung / Support du distributeur	1
17	3 02 618	Konsol / Bracket / Halter / Support de Fixation	1
18	11 03 141	Slang / Hydraulic Hose / Hydraulikschlauch / Flexible	2
19	11 20 158	Adapter / Adaptor / Sechskantnippel / Raccord hex	2
20	11 20 011	Adapter / Adaptor / Sechskantnippel / Raccord hex	1
21	11 20 119	Adapter / Adaptor / Sechskantnippel / Raccord hex	1
22	50 13 604	Kopparbricka / Washer / Scheibe / Rondelle	4
23	50 33 053	Slangkoppling / Hose fitting / Schlauchanschluss / Raccord-flexible	2
24	50 44 128	Snabbkoppling / Quick-coupling / Schnellkupplung / Adaptateur rapide	2
25	50 44 129	Dammskydd / Dust Cap / Staubkappe / Pare-poussière	2